



Ride on Roller

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.



It is important to read all of this leaflet BEFORE you use the Ride on Roller

- Plan work and think ahead to ensure work will always be carried out safely.
- Diesel fuel is highly flammable. Take care not to cause a fire or explosion.
- The ride-on roller is designed for compacting bituminous road surfaces, such as asphalt, or road sub-bases. This includes surfaces containing hardcore and ballast. It must not be used for any other purpose.
- The roller can be used on level surfaces or gentle slopes. It should not be used on any other surfaces.
- The action of the ride-on roller can cause injury or damage or both if the equipment is not used in a careful and controlled way.
- Do not drive the ride-on roller unless you have previous experience or have had a course of instruction from a responsible body. Drivers of this vehicle should have at least a current site safety awareness certificate.
- A Certificate of Training Achievement (CTA) for Construction Plant Operators is required on most construction sites. Training to achieve a CTA is available from CTR appointed bodies.
- Do not attempt to load or unload the machine from a truck or trailer unless fully experienced in doing so.
- The following items of personal protective equipment is the minimum required: Ear Muffs or earplugs (giving protection at the ear of levels up to 85dB(A); safety helmet; safety boots; dust mask - minimum 95% protection; high visibility vest or similar reflective garment.
- The ride-on roller must not be used by minors or by anyone under the influence of drugs or alcohol.
- The roller is designed for operation by an able bodied adult. Anyone with either a temporary or permanent disability must seek expert advice before using the machine.

Every effort has been made to ensure the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

HAE
THE ASSOCIATION EUROPE
Hire Association Europe
2450 Regents Court
The Crescent
Business Park
Salford B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
Website: www.hae.org.uk

- ### OPERATORS
- The following items of personal protective equipment (PPE) are the minimum that should be worn whenever using the skip loader. Particular jobs or environment may require a higher level of protection.
 - The equipment is likely to cause noise levels up to 85 dB(A) – wear appropriate ear muffs or plugs (giving hearing protection for this level as a minimum when operating the roller for long periods).
 - A safety helmet must be worn when using the machine on a construction site.
 - Safety Boots must be worn when working with the roller.
 - A reflective vest or similar high visibility garment must be worn when working with the roller.
 - An appropriate dust mask must be worn that meets the minimum standard of protection.
 - Anyone who is working near the small dumper will also need to wear the appropriate personal protective equipment.

- ### RIDE ON ROLLER
- Check the ride on roller thoroughly including the engine and all equipment. Do

- Do not use the machine where there is a danger of explosion. It will ignite fumes from petrol or gas cylinders.
- Using this equipment indoors or in confined spaces could cause fatal carbon monoxide poisoning. Never use it in domestic premises and only use it in other indoor situations if suitably and fully assessed. Mechanical extraction/ventilation will almost always be required.
- Ensure the area is clear and safe and there is no-one closely who could cause distraction.
- Never operate on any public road or highway unless the machine is insured and complies with road traffic regulations. In addition, the operator must have an appropriate driving licence.
- Check the work area for soft ground, slopes, holes and trenches. Ensure there are no low tree branches, scaffolding or anything else that may cause a hazard.
- Keep well away from any overhead power lines unless they are at least 5m (16ft) above the highest part of the roller. The highest part is probably the top of the roller protection fitted to the roller. Do not forget that high-voltage electricity can jump across large gaps.
- It the work area is complex or noisy, always

- ### INSURANCE
- Under the terms of hire, you are responsible for the safe custody of the machine. The hire company must be indemnified against loss or unreasonable damage such as vandalism. The best way to achieve this is by insurance.
 - However, the machine must always be covered against theft and vandalism. Look for the hire company's policy to prevent unauthorised use or theft.
 - Some hire companies will offer insurance cover at an extra charge.
 - In addition, be aware that if damage to the machine is caused by an uninsured hijacking accident, it is unlikely that normal insurance policies will give any protection.
 - If in any doubt about insurance cover, check with the hire company or insurer

- Check all hand rails, access steps and platforms are free from oil, fuel, grease, snow, ice or dirt.
- If the seat is adjustable, ensure it is in the correct position for a controlled working position and that it is secure.
- When working on or near a public highway, include additional premises or on a road, ensure the roller is flashing amber beacon must be in operation.
- Never carry passengers on any part of the roller.
- If you have not driven the type of ride-on roller before, carefully look at the controls before starting the engine.
- Before starting work drive into a clear area

- Use metal chocks under the roller drum. If using vibration to help compact the surface, be aware of the effect on nearby buildings or on underground pipes and cables. Never use vibration on concrete or hard, frozen ground as this damages the roller's bearings. Only apply vibration at full engine speed and turn it off before stopping the roller. If in doubt, stop work immediately and seek expert advice.
- Stop the engine, move the travel lever to neutral, apply the parking brake and remove any key before leaving the roller unattended.
- Load or unload the roller using strong and stable loading ramps. Lash the roller with shackles on the lifting points. Always lock the equipment lock before transporting.
- If the roller is fitted with a water sprinkler, parking on a slope, in other circumstances the parking brake is automatically applied when the engine is switched off.
- Always stop the roller on firm, level ground away from the work area and other traffic. If the roller has to be parked on a slope, scraper or angled in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

- ### STARTING THE ENGINE
- Ensure the hand brake is on and the gear lever is in neutral.
 - Electric start machines have a multi-position ignition switch. Turn the key part way to the on position, hold it in that position for about twenty seconds then fully turn to engage the starter.
 - Keep the throttle open when starting.
 - If the roller fails to start after a few seconds look to see if there is any smoke coming from the exhaust. If there is, try repeating the start procedure but hold in the cold start position for a little longer.
 - If the engine is warm, there is no need to use the cold start device. The key can be turned fully to engage the starter.
 - Stop the engine by pulling the STOP control.

- ### HAND START
- Some ride-on rollers need to be started by hand. This can be hazardous, so take care.
 - Before starting a cold engine, engage the cold start device. This is usually located near the fuel pump.
 - Check the handbrake is on and the gear lever is in neutral. Ensure the STOP control is pushed fully home.
 - Stand by the engine and find the starting handle and the decompression lever. If the

Redistributed under licence from HAE by FTH Hire Group. Licence expires on 31/03/2022

For guidance on managing construction health risks go to www.hse.gov.uk/construction

use metal chocks under the roller drum. If using vibration to help compact the surface, be aware of the effect on nearby buildings or on underground pipes and cables. Never use vibration on concrete or hard, frozen ground as this damages the roller's bearings. Only apply vibration at full engine speed and turn it off before stopping the roller. If in doubt, stop work immediately and seek expert advice.

- Stop the engine, move the travel lever to neutral, apply the parking brake and remove any key before leaving the roller unattended.
- Load or unload the roller using strong and stable loading ramps. Lash the roller with shackles on the lifting points. Always lock the equipment lock before transporting.
- If the roller is fitted with a water sprinkler, parking on a slope, in other circumstances the parking brake is automatically applied when the engine is switched off.
- Always stop the roller on firm, level ground away from the work area and other traffic. If the roller has to be parked on a slope, scraper or angled in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

- When changing direction, move the travel lever to the 'O' position for a moment before selecting the travel direction.
- Stop the engine before attempting to clear anything that becomes jammed in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

- When using the ride-on roller, stay aware of what is happening all around. Do not assume people or other obstacles will move out of the way.
- Climb aboard and get off the roller using the access steps and hand rails. Do not climb up or get off in any other way.
- Stay in the driver's seat unless the roller is parked. Do not lean out to move obstacles or to help other people.
- Ensure the handbrake is applied when the roller is stationary or it may creep or roll forward / backward without being noticed. If the roller is fitted with a water sprinkler, use it. The water will help to prevent the compacted surface from sticking to the roller's drum.
- If when the engine is running, anything that becomes jammed in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

- Wipe any fuel off the roller. Dispose of diesel soaked cloth carefully.
- If any fuel is left on the ground, wipe it up or cover it with soil.
- If any fuel is left on clothes, change them immediately.
- Put all fuel caps back on properly, and leave the fuel container in a safe, cool place.
- It is good practice to refill the fuel tank at the end of the day's shift and not at the start. This will prevent any condensation build up in the fuel system.

- ### STARTING THE ENGINE
- If the hire company has supplied special instructions, follow them. Otherwise follow the instructions below.
 - Ensure the handbrake is on and the gear lever is in neutral. Ensure the STOP control is pushed fully home.
 - Stand by the engine and find the starting handle and the decompression lever. If the

- ### REFUELLING
- No smoking.
 - If possible drive the roller to a safe place away from the work area.
 - Stop the engine and allow it to cool down.
 - Clean the filler cap and the area around it to prevent dirt falling into the diesel tank.
 - Use clean diesel when refuelling. If there is not a fuel pump, available use a funnel when refuelling. Do not spill any diesel on yourself or the machine.
 - Wipe any fuel off the roller. Dispose of diesel soaked cloth carefully.
 - If any fuel is left on the ground, wipe it up or cover it with soil.
 - If any fuel is left on clothes, change them immediately.
 - Put all fuel caps back on properly, and leave the fuel container in a safe, cool place.
 - It is good practice to refill the fuel tank at the end of the day's shift and not at the start. This will prevent any condensation build up in the fuel system.

HAE
THE ASSOCIATION EUROPE
Hire Association Europe
2450 Regents Court
The Crescent
Business Park
Salford B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
Website: www.hae.org.uk

- ### ENGINE STOPPING
- Ensure the handbrake is on and the gear lever is in neutral. Ensure the STOP control is pushed fully home.
 - Stand by the engine and find the starting handle and the decompression lever. If the

- ### OPERATORS
- The following items of personal protective equipment (PPE) are the minimum that should be worn whenever using the skip loader. Particular jobs or environment may require a higher level of protection.
 - The equipment is likely to cause noise levels up to 85 dB(A) – wear appropriate ear muffs or plugs (giving hearing protection for this level as a minimum when operating the roller for long periods).
 - A safety helmet must be worn when using the machine on a construction site.
 - Safety Boots must be worn when working with the roller.
 - A reflective vest or similar high visibility garment must be worn when working with the roller.
 - An appropriate dust mask must be worn that meets the minimum standard of protection.
 - Anyone who is working near the small dumper will also need to wear the appropriate personal protective equipment.

- ### RIDE ON ROLLER
- Check the ride on roller thoroughly including the engine and all equipment. Do

- Do not use the machine where there is a danger of explosion. It will ignite fumes from petrol or gas cylinders.
- Using this equipment indoors or in confined spaces could cause fatal carbon monoxide poisoning. Never use it in domestic premises and only use it in other indoor situations if suitably and fully assessed. Mechanical extraction/ventilation will almost always be required.
- Ensure the area is clear and safe and there is no-one closely who could cause distraction.
- Never operate on any public road or highway unless the machine is insured and complies with road traffic regulations. In addition, the operator must have an appropriate driving licence.
- Check the work area for soft ground, slopes, holes and trenches. Ensure there are no low tree branches, scaffolding or anything else that may cause a hazard.
- Keep well away from any overhead power lines unless they are at least 5m (16ft) above the highest part of the roller. The highest part is probably the top of the roller protection fitted to the roller. Do not forget that high-voltage electricity can jump across large gaps.
- It the work area is complex or noisy, always

- ### INSURANCE
- Under the terms of hire, you are responsible for the safe custody of the machine. The hire company must be indemnified against loss or unreasonable damage such as vandalism. The best way to achieve this is by insurance.
 - However, the machine must always be covered against theft and vandalism. Look for the hire company's policy to prevent unauthorised use or theft.
 - Some hire companies will offer insurance cover at an extra charge.
 - In addition, be aware that if damage to the machine is caused by an uninsured hijacking accident, it is unlikely that normal insurance policies will give any protection.
 - If in any doubt about insurance cover, check with the hire company or insurer

- Check all hand rails, access steps and platforms are free from oil, fuel, grease, snow, ice or dirt.
- If the seat is adjustable, ensure it is in the correct position for a controlled working position and that it is secure.
- When working on or near a public highway, include additional premises or on a road, ensure the roller is flashing amber beacon must be in operation.
- Never carry passengers on any part of the roller.
- If you have not driven the type of ride-on roller before, carefully look at the controls before starting the engine.
- Before starting work drive into a clear area

- Use metal chocks under the roller drum. If using vibration to help compact the surface, be aware of the effect on nearby buildings or on underground pipes and cables. Never use vibration on concrete or hard, frozen ground as this damages the roller's bearings. Only apply vibration at full engine speed and turn it off before stopping the roller. If in doubt, stop work immediately and seek expert advice.
- Stop the engine, move the travel lever to neutral, apply the parking brake and remove any key before leaving the roller unattended.
- Load or unload the roller using strong and stable loading ramps. Lash the roller with shackles on the lifting points. Always lock the equipment lock before transporting.
- If the roller is fitted with a water sprinkler, parking on a slope, in other circumstances the parking brake is automatically applied when the engine is switched off.
- Always stop the roller on firm, level ground away from the work area and other traffic. If the roller has to be parked on a slope, scraper or angled in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

- When changing direction, move the travel lever to the 'O' position for a moment before selecting the travel direction.
- Stop the engine before attempting to clear anything that becomes jammed in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

- When using the ride-on roller, stay aware of what is happening all around. Do not assume people or other obstacles will move out of the way.
- Climb aboard and get off the roller using the access steps and hand rails. Do not climb up or get off in any other way.
- Stay in the driver's seat unless the roller is parked. Do not lean out to move obstacles or to help other people.
- Ensure the handbrake is applied when the roller is stationary or it may creep or roll forward / backward without being noticed. If the roller is fitted with a water sprinkler, use it. The water will help to prevent the compacted surface from sticking to the roller's drum.
- If when the engine is running, anything that becomes jammed in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

Always use the engine stop control to stop the engine.

- Do not use the decompression lever, as this will damage the engine and will be seen by your hire company as misuse.
- To prevent unauthorised use, turn off and remove the ignition key (if there is one).

USING THE RIDE-ON ROLLER

- When using the ride-on roller, stay aware of what is happening all around. Do not assume people or other obstacles will move out of the way.
- Climb aboard and get off the roller using the access steps and hand rails. Do not climb up or get off in any other way.
- Stay in the driver's seat unless the roller is parked. Do not lean out to move obstacles or to help other people.
- Ensure the handbrake is applied when the roller is stationary or it may creep or roll forward / backward without being noticed. If the roller is fitted with a water sprinkler, use it. The water will help to prevent the compacted surface from sticking to the roller's drum.
- If when the engine is running, anything that becomes jammed in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

HAE
THE ASSOCIATION EUROPE
Hire Association Europe
2450 Regents Court
The Crescent
Business Park
Salford B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
Website: www.hae.org.uk

- ### STARTING THE ENGINE
- If the hire company has supplied special instructions, follow them. Otherwise follow the instructions below.
 - Ensure the handbrake is on and the gear lever is in neutral. Ensure the STOP control is pushed fully home.
 - Stand by the engine and find the starting handle and the decompression lever. If the

- ### REFUELLING
- No smoking.
 - If possible drive the roller to a safe place away from the work area.
 - Stop the engine and allow it to cool down.
 - Clean the filler cap and the area around it to prevent dirt falling into the diesel tank.
 - Use clean diesel when refuelling. If there is not a fuel pump, available use a funnel when refuelling. Do not spill any diesel on yourself or the machine.
 - Wipe any fuel off the roller. Dispose of diesel soaked cloth carefully.
 - If any fuel is left on the ground, wipe it up or cover it with soil.
 - If any fuel is left on clothes, change them immediately.
 - Put all fuel caps back on properly, and leave the fuel container in a safe, cool place.
 - It is good practice to refill the fuel tank at the end of the day's shift and not at the start. This will prevent any condensation build up in the fuel system.

- ### ENGINE STOPPING
- Ensure the handbrake is on and the gear lever is in neutral. Ensure the STOP control is pushed fully home.
 - Stand by the engine and find the starting handle and the decompression lever. If the

- ### OPERATORS
- The following items of personal protective equipment (PPE) are the minimum that should be worn whenever using the skip loader. Particular jobs or environment may require a higher level of protection.
 - The equipment is likely to cause noise levels up to 85 dB(A) – wear appropriate ear muffs or plugs (giving hearing protection for this level as a minimum when operating the roller for long periods).
 - A safety helmet must be worn when using the machine on a construction site.
 - Safety Boots must be worn when working with the roller.
 - A reflective vest or similar high visibility garment must be worn when working with the roller.
 - An appropriate dust mask must be worn that meets the minimum standard of protection.
 - Anyone who is working near the small dumper will also need to wear the appropriate personal protective equipment.

- ### RIDE ON ROLLER
- Check the ride on roller thoroughly including the engine and all equipment. Do

- Do not use the machine where there is a danger of explosion. It will ignite fumes from petrol or gas cylinders.
- Using this equipment indoors or in confined spaces could cause fatal carbon monoxide poisoning. Never use it in domestic premises and only use it in other indoor situations if suitably and fully assessed. Mechanical extraction/ventilation will almost always be required.
- Ensure the area is clear and safe and there is no-one closely who could cause distraction.
- Never operate on any public road or highway unless the machine is insured and complies with road traffic regulations. In addition, the operator must have an appropriate driving licence.
- Check the work area for soft ground, slopes, holes and trenches. Ensure there are no low tree branches, scaffolding or anything else that may cause a hazard.
- Keep well away from any overhead power lines unless they are at least 5m (16ft) above the highest part of the roller. The highest part is probably the top of the roller protection fitted to the roller. Do not forget that high-voltage electricity can jump across large gaps.
- It the work area is complex or noisy, always

- ### INSURANCE
- Under the terms of hire, you are responsible for the safe custody of the machine. The hire company must be indemnified against loss or unreasonable damage such as vandalism. The best way to achieve this is by insurance.
 - However, the machine must always be covered against theft and vandalism. Look for the hire company's policy to prevent unauthorised use or theft.
 - Some hire companies will offer insurance cover at an extra charge.
 - In addition, be aware that if damage to the machine is caused by an uninsured hijacking accident, it is unlikely that normal insurance policies will give any protection.
 - If in any doubt about insurance cover, check with the hire company or insurer

- Check all hand rails, access steps and platforms are free from oil, fuel, grease, snow, ice or dirt.
- If the seat is adjustable, ensure it is in the correct position for a controlled working position and that it is secure.
- When working on or near a public highway, include additional premises or on a road, ensure the roller is flashing amber beacon must be in operation.
- Never carry passengers on any part of the roller.
- If you have not driven the type of ride-on roller before, carefully look at the controls before starting the engine.
- Before starting work drive into a clear area

- Use metal chocks under the roller drum. If using vibration to help compact the surface, be aware of the effect on nearby buildings or on underground pipes and cables. Never use vibration on concrete or hard, frozen ground as this damages the roller's bearings. Only apply vibration at full engine speed and turn it off before stopping the roller. If in doubt, stop work immediately and seek expert advice.
- Stop the engine, move the travel lever to neutral, apply the parking brake and remove any key before leaving the roller unattended.
- Load or unload the roller using strong and stable loading ramps. Lash the roller with shackles on the lifting points. Always lock the equipment lock before transporting.
- If the roller is fitted with a water sprinkler, parking on a slope, in other circumstances the parking brake is automatically applied when the engine is switched off.
- Always stop the roller on firm, level ground away from the work area and other traffic. If the roller has to be parked on a slope, scraper or angled in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.

- When changing direction, move the travel lever to the 'O' position for a moment before selecting the travel direction.
- Stop the engine before attempting to clear anything that becomes jammed in the drive mechanism.
- Before driving the roller in reverse, ensure there are no people or obstructions behind you.
- Avoid hazardous areas such as soft ground, trenches or overhead obstacles.